



HOW TO APPLY 3D WALLPAPER




1. Tools

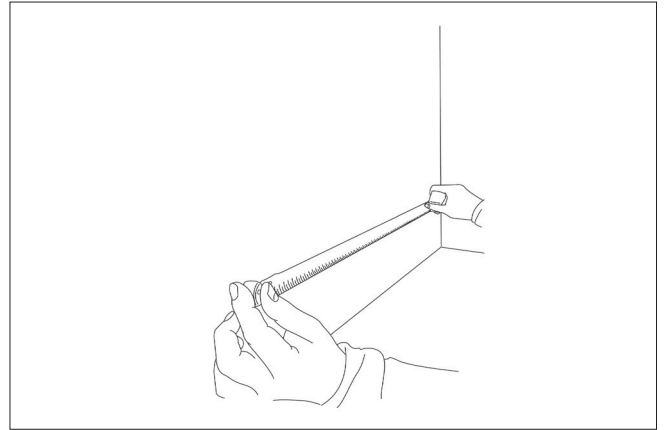


2. Measure

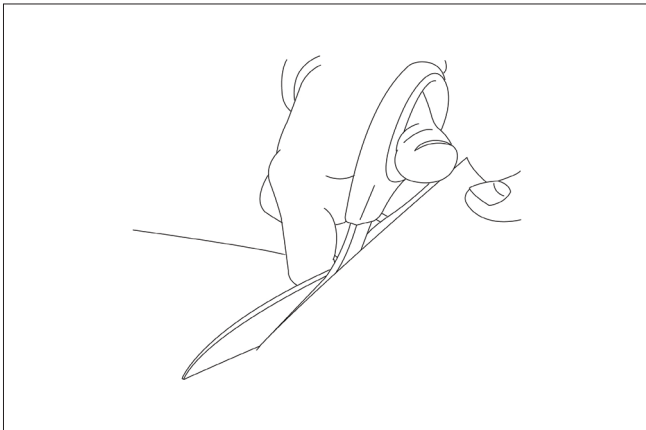


3. Cut

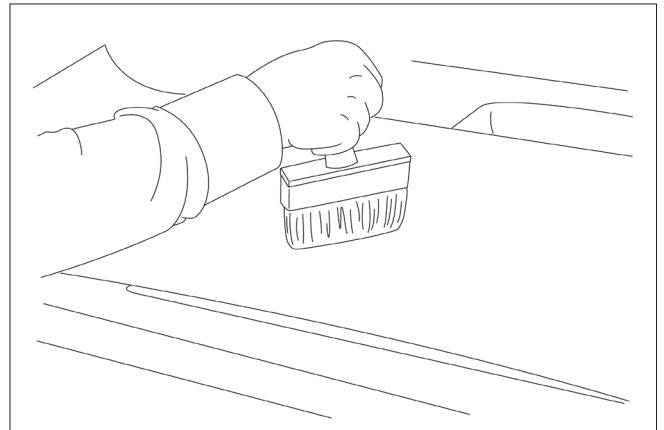

4. For plastered walls, apply wallpaper paste to the reverse and leave to soak for 10 minutes

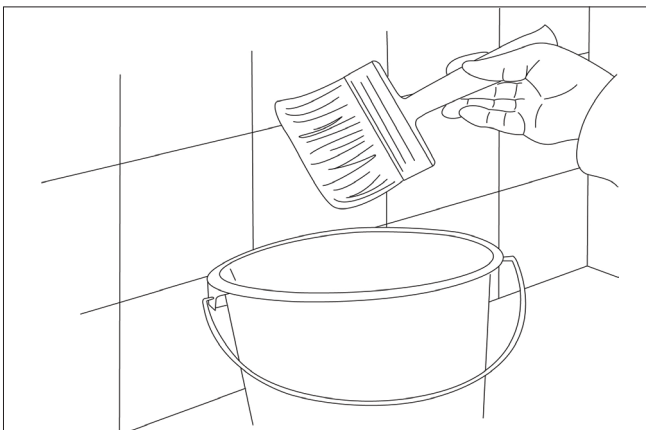

5. For tiled surfaces apply special glue (270-1098) directly on to the tiles

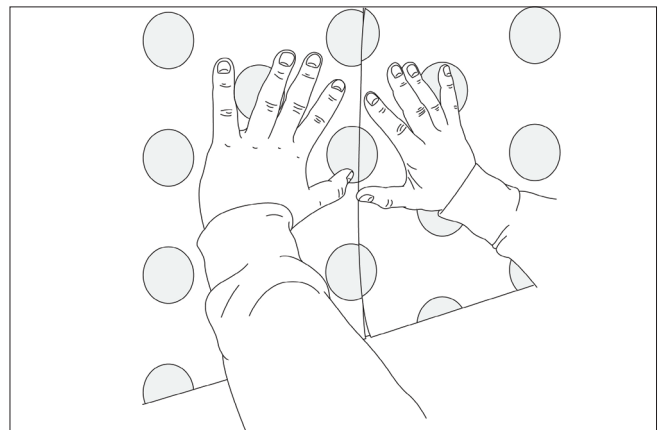

6. Apply to wall (horizontally) and butt join to match the pattern